 
 **Helpline: Toll Free USA 1-877-CASHMAS**
Toll Free AUS +61 (3) 9427 8560

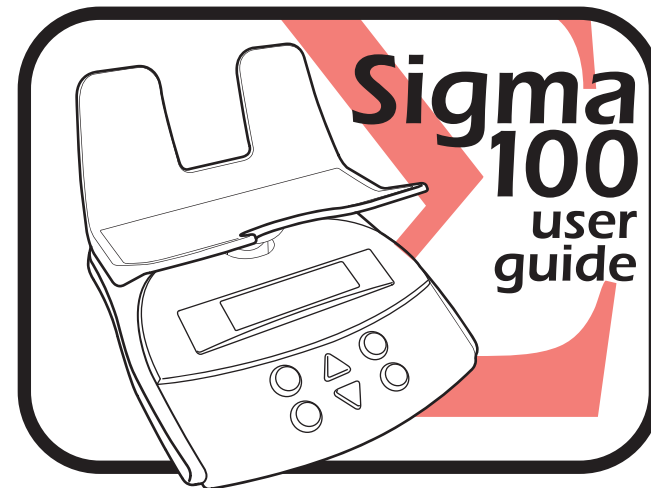

Office:
(West Coast)

Cashmaster USA (West Coast)
 Stockdale Business Center
 5630 District Blvd, Suite 104
 Bakersfield
 California
 CA93313

Office:
(East Coast)


Cashmaster USA (East Coast)
 1737 Neva Street
 Allentown
 Pennsylvania
 PA18104

Tel:
 Fax:
 Web:

+ (1) 661 397 4088
 + (1) 661 397 4288
 www.cashmaster.com

Tel:
 Fax:
 Web:

+ (1) 610 432 7700
 + (1) 610 432 7710
 www.cashmaster.com

 **Helpline: Toll Free USA 1-877-CASHMAS**
Toll Free AUS +61 (3) 9427 8560

Start up

- Place the sigma 100 on a firm, even surface, away from draughts and vibrations
- Insert the BASKET, pushing the connection firmly into place.
- Plug in the ac adaptor and switch on at the mains.

NOTE: THE COIN SCOOP SHOULD NOT BE PLACED ON TOP OF THE MACHINE BEFORE SWITCHING ON.

- Press the On-Off key.



Counting Coins

Loose coins



You can select the denomination you require with the Up or Down Arrow keys.

Place a scoop full of coins onto the basket.



The display will show the value, eg:

If Auto Add is on then the value will automatically be added to the grand total when the scoop is removed.

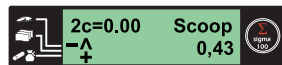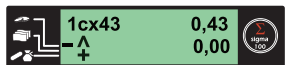

Note: If Auto Add is off, you will need to add the value by pressing the Plus key.

Packaged Coins


Press the Cash type key so that PACKAGED COINS is selected.



Place a bag of coins onto the basket.

The display should show the value, eg:

If the machine does not recognise the weight as a full bag or roll the following will be displayed:

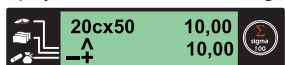

If Auto Add is on then the value will automatically be added to the grand total when the bag is removed.

Using the Coin UP or Coin DOWN Arrow keys, select the actual denomination and the machine will then display the value, together with the number of coins in the bag/roll. Accept the chosen value by pressing the '+' key.

Note: If Auto Add is off, you will need to add the value by pressing the Plus key.

Counting Bills

Loose Bills

Press the Cash type key so that BILLS is selected.





You can select the denomination you require with the Up or Down Arrow keys.



Place a small quantity of bills onto the hod.

The display will show the value, eg:


Remove the bills. The value will automatically be added to the grand total:

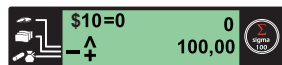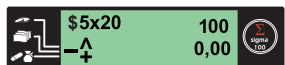

Note: If Auto Add/Scroll is off, you will need to add the value by pressing the Plus key.




Select the bill denomination you require (see loose bills section), then using the correct denomination place a small amount of bills (8-10) onto the hod.

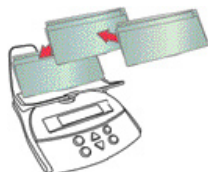

When the display shows the value continue adding small amounts of bills. Remove the bills from the machine. Repeat this process but add more bills at a time until you can apply up to 25-30 bills at one time.


If the following message appears on the display, then too many bills have been applied in a single quantity:

Remove some bills until you get a valid reading, then continue placing bills, as above.

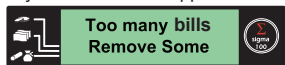

* The maximum number of bills that can be applied is governed by the currency condition and may alter between countries.


Basket

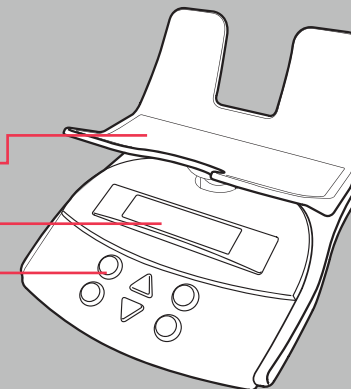

Keypad Layout

Plus - Used to add amounts to the total. To clear a sub-total choose denomination then press for 2 seconds. To clear all totals, press and hold for 5 seconds then follow on-screen instructions.

On/Off - Press once to switch machine on. Press and hold to switch machine off.

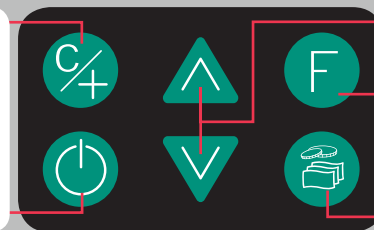

Up/Down - Used to select required bill and coin denominations


Function - See Fast Key functions

Cash type - Select loose coins, packaged coins or bills

Screen

denomination and number of pieces

current cash type indicator- select loose coins, packaged coins or bills

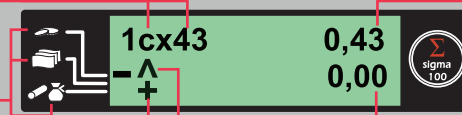

cash value of applied denomination

grand total

auto scroll

auto add

Fast Key Functions (Depending on Software Setup)

F **PRINT** - press the Function key and Plus key together. (CP3 printer must be attached)

F **FLOAT** - To turn the Float option ON/OFF, hold down the Function key and press the UP Arrow key

To access Auto Add/Scroll, set float or to recalibrate your cup or scoop, go to www.cashmaster.com

Note Weight Fluctuations

Bill weights may vary from the initial factory setting, for example weight can vary due to age, usage or general local atmospheric conditions. Your Cashmaster machine accounts for these variations and continually monitors the bill conditions, automatically adjusting itself to ensure constant optimal performance.

When you first receive your Cashmaster it may be necessary to carry out some initial bill 'learning' in order to quickly tune the machine to your local bill conditions. See 'Counting Bills' section for further details.

Screen Messages

HIGH VIB LOCKOUT - Ensure machine is on a level surface and the basket is not obstructed

BELOW MINIMUM WEIGHT - Ensure that the basket is correctly attached to the cash counter. Restart counting.