


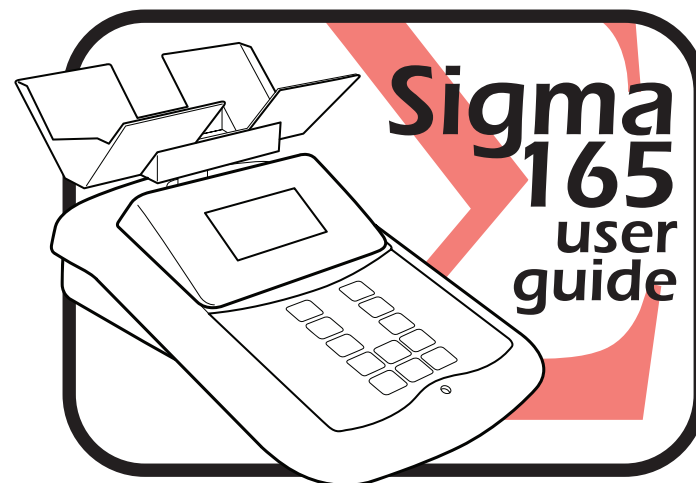

Helpline: Toll Free USA 1-877-CASHMAS
Toll Free AUS +61 (3) 9427 8560



Office:
(West Coast)

Cashmaster USA (West Coast)
4415 Yeager Way
Suite 300
Bakersfield
California
CA93313

Office:
(East Coast)

Cashmaster USA (East Coast)
Orange Blossom Centre
2593 N. Orange Blossom Trail
Kissimmee
FL34744

Tel:
Fax:
Web:

+ (1) 661 397 4088
+ (1) 661 397 4288
www.cashmaster.com

Tel:
Fax:
Web:

+ (1) 407 518 9134
+ (1) 407 847 7993
www.cashmaster.com



Helpline: Toll Free USA 1-877-CASHMAS
Toll Free AUS +61 (3) 9427 8560

Start Up

- Place the Sigma 165 on a firm, even surface, away from draughts and vibrations.
- Insert the BASKET, pushing down firmly into position.
- Plug in the AC adaptor and switch on at the mains.

NOTE: THE COIN SCOOP SHOULD NOT BE PLACED ON TOP OF THE MACHINE BEFORE SWITCHING ON.

- Press the On/Off key.



Counting Coins

Loose Coins

Press the Coin UP or Coin DOWN Arrow keys to select the required denomination.



Display will show:

| | | |
|-----------|--------------|-------|
| ☰ | 21.03.2007 | 09:10 |
| 1c | Scoop | |
| Coins | | |
| USD | | 0.00 |
| Float | | 0.00 |

Select the required denomination by pressing the Coin UP or Coin DOWN Arrow keys. Place loose coins in the scoop. The number of coins together with the value is shown on the display.

| | | |
|-----------|-------------|--------|
| ☰ | 21.03.2007 | 09:10 |
| 1c | x 31 | |
| Coins | | |
| USD | | 0.31 |
| Float | | 100.00 |

The value of coins on the basket is added to the Grand Total when the coins are removed from the scale.

Packaged Coins

Select bagged/rolled Coin mode by pressing the PACKAGED COIN key.



Place a bag of coins on the basket.

If the machine verifies the bag then the denomination, together with the value and number of pieces, is shown on the display.

| | | |
|-----------|-------------|-------|
| ☰ | 21.03.2007 | 09:10 |
| 5c | x 50 | |
| Coins | | |
| USD | | 2.50 |
| Float | | 97.50 |

If the machine does not recognise the weight as a full bag or roll the following will be displayed (**Do not remove bag from basket**):

*** SUSPECT ***



SELECT ACTUAL DENOMINATION

Using the Coin UP or Coin DOWN Arrow keys, select the actual denomination and the machine will then display the value, together with the number of coins in the bag. Accept the chosen value by pressing the '+' key. Then continue to stack your bags of coins one by one.

 
Counting Bills

Select the bill denomination you require (see loose bill section), then using the correct denomination place a small number of bills (8-10) onto the basket. When the display shows the value continue adding small amounts of bills. Remove the bills from the machine. Repeat this process but add more bills each time until you can apply upto 25 bills at one time.

This is a relatively quick process and is generally only required when the Cashmaster is first used.

Loose Bills

Select the denomination by pressing the BILL UP or BILL DOWN Arrow key.



Display will show:

| | | |
|------------|------------|--------|
| ☰ | 21.03.2007 | 09:10 |
| \$5 | | |
| Bills | | |
| USD | | 0.00 |
| Float | | 100.00 |

Apply bills in groups of 25-30 at a time. Continue adding bills to the basket, until all of the denomination has been counted.

The value of bills on the basket is added to the Grand Total when the bills are removed from the scale.

If "REMOVE SOME" is displayed, remove some of the bills on the basket until a reading appears on the screen, then continue adding as described above.

You may select another denomination by pressing the BILL UP or BILL DOWN Arrow keys.

Packaged Bills

Select packaged bill mode by pressing the PACKAGED BILL key.




Select the required denomination by pressing the BILL UP or BILL DOWN Arrow key.

Place the package of bills on the basket - the value is shown on the display.

| | | |
|------------|------------|-------|
| ☰ | 21.03.2007 | 09:10 |
| \$5 | | |
| Bundles | | |
| USD | | 0.00 |
| Total | | 67.50 |

Basket

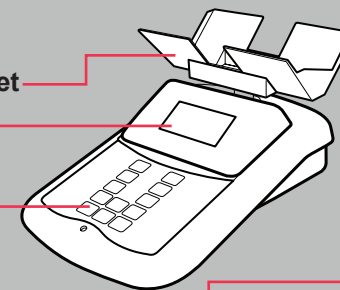

Keypad Layout

Packaged Bills - Select packaged bills to toggle between band/sleeve/loose

Up/Down - Used to select required bill and coin denominations

CLEAR - Press once to clear the Grand total

Print - Press once for a print out of the totals

CLEAR ENTRY - Push once to clear sub totals

Packaged Coins - Push to select bagged coins

Function Key

On/Off - Press once to switch machine on. Press and hold to switch machine off

Plus - Used to add amounts to the total

Screen Layout

| | | | | |
|-------------------------|-----------|--------------|--------|------------------|
| auto add | ☰ | 21.03.2007 | 09:10 | date |
| auto advance | | | | time |
| battery in use | 1c | x 202 | | number of pieces |
| selected denomination | Coins | | | sub total |
| coins / bills | USD | | 2.02 | running total |
| selected currency | Float | | 100.00 | |
| total / float indicator | | | | |

Fast Key Functions

AUTO ADD - Press and hold the 'F' key and press the 'PLUS (+)' key. This will toggle Auto Add state. "+" will be displayed on the screen when Auto Add is on.

AUTO SCROLL - Press and hold the 'F' key and press the 'MINUS (-)' key. This will toggle Auto Scroll state. "▲" will be displayed on the screen when Auto Scroll is on.

FLOAT - Press and hold down the 'F' key and press the 'Coin UP' key. This will allow your float to be activated or deactivated.

CALIBRATE SCOOP - Press and hold down the 'F' key and press the 'ON/OFF' key and follow the onscreen instructions.

CURRENCY CHANGE - Press and hold the 'F' key and 'Packaged Coins' key to change currency.

Bill Weight Fluctuations

Bill weights may vary from the initial factory setting. For example, weight can vary due to age, usage or general local atmospheric conditions. Your Cashmaster machine accounts for these variations and continually monitors the bill conditions, automatically adjusting itself to ensure constant optimal performance.

When you first receive your Cashmaster it may be necessary to carry out some initial bill 'learning' in order to quickly tune the machine to your local bill conditions. See 'Counting Bills' section for further details.

Charging

When the LED is red this indicates that the battery is fast-charging. Charging takes approximately 2 hours. When the LED is green the battery is fully charged and can be operated without AC power. When the LED is flashing the unit is on slow charge.